

Humble Hint.

Ever had a Grease nipple that seems to ooze grease from between the gun and the nipple when attempting to lubricate? If this still happens after firstly checking for a blocked nipple, then the obvious cause is a bad contact that does not seal the gun to the nipple. If this happens, then try placing a piece of clean cotton cloth over the nipple before lubricating. This will form a very effective seal.

This hint is equally effective if there is an air leak from between the inner-tube and pump adaptor, when inflating tyres.